



QP88S

88-keys Cabinet Digital Piano

- Thank you for choosing QK88P. Please read this manual carefully before operation to ensure safety and keep it for future reference.

Attentions

1. Do not share a socket with other appliances. Socket sharing can easily cause overheating, and unexpected accidents could happen because of wire burning.
2. Do not disassemble, repair and refit without permission. Self-disassembly or modification can easily cause unanticipated failure and lead to accidents. It will seriously affect the consumer's rights.
3. Disconnect the plug when it is out of service.
4. Pay attention to the wire keep and protection. Do not break, pull, distort, and lengthen the wire to avoid unexpected accidents. Avoid heavy pressure when keeping and using.
5. Use it at the rated voltage. Playing at the lower voltage cannot get the normal tone and will shorten its life; playing at the higher voltage will burn down the internal circuit, and even lead to fire.
6. Do not rinse with water or use the bathroom to avoid malfunction and unexpected accidents. Careful maintenance to the keyboard can extend its life and reduce the fault, please do as the followings:

1. Dust-proof, moisture-proof

Clean appearance should be kept avoiding foreign matters falling into the body through the cracks; the Keyboard should be wept with soft and dry cloth to prevent moisture intrusion; it should be placed at a dry place but avoided for long time exposure under the strong sunshine.

2. Shock-proof

The piano should be handled with care when moving. Violent shaking and collision can break the shell and cause damage to the internal electronics.

3. Anti-corrosion

The instrument should be avoided to contact with acidic or alkaline substances and to work on occasion with serious corrosive gases to prevent line oxidation.

4. Anti-disassembly

The keyboard is a precision instrument, any changes may cause problems and technical failure. Any problems please contact the company maintenance department or distributor or experienced maintenance personnel. Please do not arbitrarily replace the components.

Contenido

Attentions	2
Function List.....	6
Overview	7
Operation Guide	7
1 - POWER.....	7
2 - VOLUME LEVEL	7
3 - TONE / RHYTHM	7
4 - MENU	8
5 - DEMOS	9
6 - REC/PLAY	9
7 - START/SYNC.....	9
8 - CHORD FUNCTION.....	10
9 - INTRO/END.....	10
10 - FILL	10
11 - METRONOME / TEMPO	10
12 - FUNCTION CONTROL	11
13 – TONE/RHYTHM MEMORY STORAGE SETTING	13
14 – BLUETOOTH FUNCTION	13
15 – HEADPHONE JACKS	13
16 – PEDAL	13
TONE LIST	14
DEMO LIST	16
RHYTHM LIST	17
ASSEMBLY	19



www.oqanmusic.com

OQAN PRODUCT

USER MANUAL - EN

Thank you very much for purchasing an OQAN brand product. We kindly ask you to please read carefully the user's manual that you can find in this link: <https://oqanmusic.com/downloads-no/> or capturing this QR code with your mobile phone to make sure you are doing a correct use of your equipment or instrument.



OQAN is committed to providing products of the highest quality, service and experience for the user for our clients so we incorporate our **Limited Warranty Extended from 3 years**. Remember to register your new OQAN equipment or instrument within ninety (90) days from the date of purchase to qualify for the extended warranty. This can be done quickly visiting: <https://oqanmusic.com/warranty>.

PRODUCTO OQAN

MANUAL DE USO - ES

Muchas gracias por comprar un producto de la marca OQAN. Le rogamos lea atentamente el manual de usuario que podrá encontrar en este link: <https://oqanmusic.com/downloads-no/> o capturando este código QR con su telefono móvil para asegurarse de estar realizando una correcta utilización de su equipo o instrumento.



OQAN se compromete a proporcionar productos de la mayor calidad, servicio y experiencia para el usuario para nuestros clientes por lo que incorporamos nuestra **Garantía Limitada Extendida de 3 años**. Recuerde registrar su nuevo equipo o instrumento OQAN dentro de los noventa (90) días a partir de la fecha de compra para tener derecho a la garantía extendida. Esto puede realizarse rápidamente visitando: <https://oqanmusic.com/warranty>.



PRODUTO OQAN

MANUAL DE UTILIZAÇÃO - PT

Muito obrigado por comprar um produto da marca OQAN. Pedimos-lhe gentilmente leia atentamente o manual do utilizador que pode encontrar neste link: <https://oqanmusic.com/downloads-no/> ou capturando este código QR com o seu telemóvel para ter a certeza de que está a fazer um utilização do seu equipamento ou instrumento.



A OQAN está empenhada em fornecer produtos da mais alta qualidade, serviço e experiência para o utilizador para os nossos clientes, pelo que incorporamos a nossa **Garantia Limitada Prolongado de 3 anos**. Lembre-se de registar o seu novo equipamento ou instrumento OQAN dentro de noventa (90) dias a partir da data de compra para poder beneficiar da garantia alargada. Isto pode ser feito rapidamente visitando: <https://oqanmusic.com/warranty>.

PRODOTTO OQAN

MANUALE D'USO - IT

Grazie mille per aver acquistato un prodotto a marchio OQAN. Vi chiediamo leggere attentamente il manuale d'uso che si trova in questo link: <https://oqanmusic.com/downloads-no/> o catturando questo codice QR con il cellulare per essere sicuri di fare una vera e propria l'uso del vostro apparecchiature o strumenti..



OQAN si impegna a fornire prodotti di altissima qualità, servizio ed esperienza per l'utente per i nostri clienti in modo da incorporare la nostra **Garanzia Limitata Esteso a partire da 3 anni**. Ricordatevi di registrare il vostro nuovo apparecchio o strumento OQAN all'interno di novanta (90) giorni dalla data di acquisto per beneficiare dell'estensione di garanzia. Questo può essere fatto rapidamente visitando il sito: <https://oqanmusic.com/warranty>.

PRODUIT OQAN

MANUEL D'UTILISATIONO - FR

Merci beaucoup d'avoir acheté un produit de la marque OQAN. Nous vous demandons de bien vouloir lisez attentivement le manuel d'utilisation que vous trouverez dans ce lien: <https://oqanmusic.com/downloads-no/> ou en saisissant ce code QR avec votre téléphone portable pour vous assurer que vous faites l'utilisation de votre l'équipement ou l'instrument.

 


OQAN s'engage à fournir des produits de la plus haute qualité, un service et une expérience pour l'utilisateur pour nos clients, nous incorporons donc notre **Garantie Limitée Prolongation de 3 ans**. N'oubliez pas d'enregistrer votre nouvel équipement ou instrument OQAN dans quatre-vingt-dix (90) jours à compter de la date d'achat pour bénéficier de la garantie prolongée. Vous pouvez le faire rapidement en visitant le site : <https://oqanmusic.com/warranty>.


Function List

Type	Digital Piano
Color	Black
Keyboard	Fully weighted hammer action keyboard
Polyphony	128 voices
Tones	200 tones, including 128 GM standard tones
Demo	60 demos
Record / Play	Convenient Record and Play function, accompaniment track can be recorded.
Bluetooth	Connects to phone or computer to play songs, or to learning software that supports Bluetooth operation.
Metronome	9 metronome types, measure selection, 20 to 280 bpm
Storage function	4 sets of storage via memory function keys
Accompaniment control	Start/Sync, Chord, Intro/End, Fill
Menu	Rhythm volume Transpose (+/-12) Touch (3 touch level) Balance Split note Dual Reverb Level Chorus Level Tempo Signature Percussion
USB/MIDI	Compatible USB MIDI port for computer
Power	15V 3A

Overview

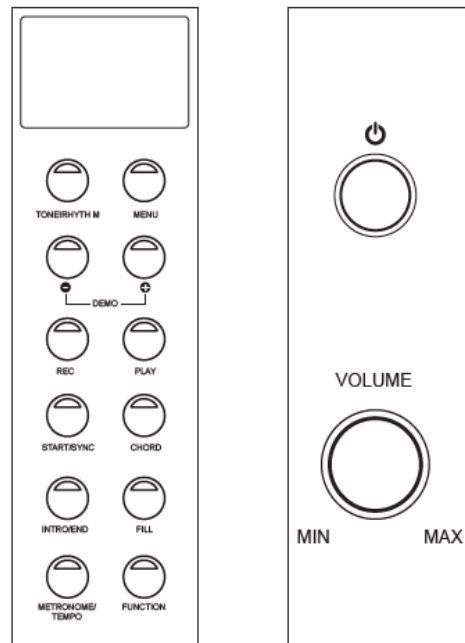

 1.Rear Panel

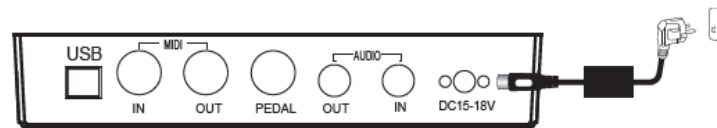

Operation Guide

1 - POWER

- Press POWER button to turn on the digital piano, default tone is Grand Piano.
- Hold POWER button for 2 seconds to turn off power.

2 - VOLUME LEVEL

Rotate VOLUME wheel to adjust the volume level.

3 - TONE / RHYTHM

200 tones available:

- Press "TONE/RHYTHM button to start tone mode.

- b) Use “-“ or “+” buttons or enter 3 digital number “000-199” to choose a tone.

100 rhythms available:

- a) Press “TONE/RHYTHM” button again to start rhythm mode

4 - MENU

- a) Press “MENU” button to enter the function menu options and select of the available functions.
- b) Under “MENU” function mode, press “TONE/RHYTHM” button to exit the function section interface.

LCD SHOW	Adjusting range
Rhythm volume	000-127
Transpose	+/-12
Touch	001-003
Balance	001-127
Split note	045-096
Reverb level	001-008
Chorus level	001-008
Signature	1/4, 2/4, 3/4, 4/4, 5/4, 6/4, 3/8, 6/8, 12/8

A. Rhythm volume

Press “-“ or “+” button to adjust the rhythm volume. Adjusting range: 000-127

B. Transpose

This function allows notes to be moved up or down by 12 semitones within an octave range.

Press “-“ or “+” buttons to adjust the transpose setting. Adjusting range: 12 semitones

C. Touch

The keyboard is touch sensitive. When keyboard starts, the function is selected automatically.

Press “-“ or “+” buttons to select the touch level. Adjusting range: 001-003

D. Dual Balance

Under dual voice setting mode, press “-“ or “+” buttons to adjust the dual balance. Adjusting range: 000-0127.

E. Split note

Press “-“ or “+” buttons to adjust the split note position. Adjusting range: 045-096.

F. Reverb level

Press “-“ or “+” buttons to adjust the reverb level. Adjusting range: 001-008.

G. Chorus level

Press “-“ or “+” buttons to adjust the chorus level. Adjusting range: 001-008.

H. Signature

Press “-“ or “+” buttons to adjust the metronome signature. Signature types: 1/4, 2/4, 3/4, 4/4, 5/4, 6/4, 3/8, 6/8, 12/8

5 - DEMOS

Use “-“ or “+” buttons to choose tone or rhythm demos.

- a) Hold “-“ or “+” buttons at the same time to enter Demo songs mode.
- b) Hold “-“ or “+” buttons at the same time to exit Demo songs mode.
- c) While in Demo mode, press “FUNCTION” button (button indicator light will flash), enter 3 digital number “000-059” on keys to choose a different demo song, and press “FUNCTION” button or wait within 6 seconds to start the demo song.

6 - REC/PLAY

- a) Press “REC” button (the button indicator light will flash). Metronome is enabled to enter the recording by default. Press “METRONOME/TEMPO” button to stop the metronome.
- b) Press “REC” button again (the button indicator light will stop) to exit recording model.
- c) Press “PLAY” button (the button indicator light will flash), to play the previous recording.
- d) After playing the recording, button indicator light will stop.

7 - START/SYNC

- a) Press “START/SYNC” button to start auto accompaniment and play along the current selected rhythm.
- b) Hold “START/SYNC” button for 2 seconds (button indicator light will flash) to start SYNC mode.

How to use Sync Start function

- a) Press "CHORD" button to start chord mode, then press "SYNC START" button to start synchro standby mode.
- b) Play a chord to automatically start the accompaniment.
- c) Press "START/SYNC" button again to stop synchro mode.

8 - CHORD FUNCTION

- a) Press "CHORD" button, then press "START/SYNC" to start auto chord function.
- b) Press "START/SYNC" button again to stop chord function, button indicator light will stop.

CHORD ACCOMPANIMENT

- a) Press "START/SYNC" button to start performance of selected rhythm.
- b) Press "START/SYNC" button to start chord mode
- c) The auto accompaniment chord function will be assigned to keys 1-22 from the left.
- d) Press "CHORD" button again to stop chord mode.

9 - INTRO/END

- a) Press "INTRO/END" button to start INTRO mode.
- b) Press "INTRO/END" button again to stop INTRO mode.

How to use INTRO/END function

- a) Press "TONE/RHYTHM" button at first and select a rhythm.
- b) Press "INTRO/END" button to enter INTRO mode, then press "START/STOP" or "SYNC/START" button to insert INTRO pattern into the rhythm.
- c) While playing a rhythm, hold "INTRO/END" button for 2 seconds (indicator light will flash) to insert the end pattern into the rhythm.

10 - FILL

- a) Press "TONE/RHYTHM" button at first and select the required rhythm.
- b) Press "START/SYNC" button to start the rhythm performance.
- c) You can insert a fill pattern into the rhythm by pressing the "FILL" button.

11 - METRONOME / TEMPO

 
- a) Press "METRONOME/TEMPO" button to start metronome function.
- b) Press "METRONOME/TEMPO" button again to exit the metronome function.

Tempo

- a) Hold “METRONOME/TEMPO” button (button indicator light will flash) to start tempo mode.
- b) Press “-” or “+” buttons to change the tempo speed. Adjusting range: 20-280 bpm.
(Note: restarting the piano will restore the default tempo value)

12 - FUNCTION CONTROL

Please check FUNCTION ON KEYS sticker delivered with the user manual. You can choose whether to stick it on the product or not.

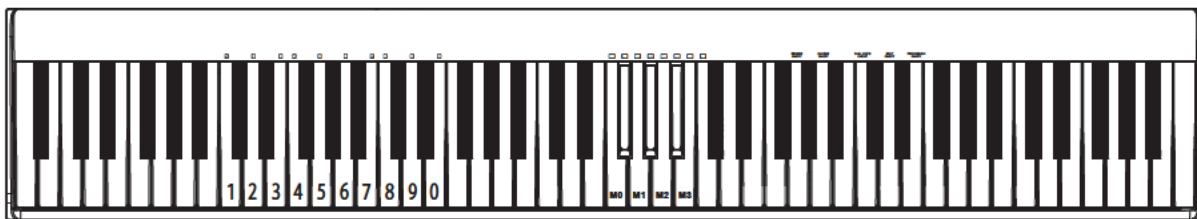

- a) Press “FUNCTION” button (button indicator light will flash). Within 6 seconds, press the function key on the keyboard to select the corresponding function.
- b) Press “FUNCTION” button again (button indicator light will stop flashing) to exit the corresponding function.

1 - Reverb effect

- a) Press “FUNCTION” button (the button indicator light will flash), press “REVERB ON/OFF” keys on keyboard within 6 seconds to start REVERB mode.
- b) Press “FUNCTION” button (the button indicator light will flash), press “REVERB ON/OFF” keys on keyboard within 6 seconds to exit REVERB mode.
- c) Use “Reverb level” under “MENU” function to adjust the Reverb level.

2 - Chorus effect

- a) Press “FUNCTION” button (the button indicator light will flash), press “CHORUS ON/OFF” keys on keyboard within 6 seconds to start CHORUS mode.
- b) Press “FUNCTION” button (the button indicator light will flash), press “CHORUS ON/OFF” keys on keyboard within 6 seconds to exit CHORUS mode.
- c) Use “Chorus level” under “MENU” function to adjust the Chorus level.

3 - Dual voice

- a) Press "FUNCTION" button (the button indicator light will flash), press "DUAL VOICE" keys on keyboard within 6 seconds to start DUAL VOICE mode.
- b) Press "FUNCTION" button (the button indicator light will flash), press "DUAL VOICE" keys on keyboard within 6 seconds to exit DUAL VOICE mode.

How to use Dual voice function

 
- a) Start tone mode at first and select an instrument as main tone.
- b) Press "DUAL VOICE ON/OFF" key to select second dual voice tone. Default second tone is 049 STRINGS2.
- c) Use "-" or "+" buttons or "NUMBER KEYS" TO SELECT AN INSTRUMENT AS DUAL VOICE TONE
- d) Enter "Balance" option under "MENU" to adjust the level between both tones.

4 – Keyboard Split function

- a) Press "FUNCTION" button (the indicator light will flash), within 6 seconds press "SPLIT ON/OFF" keys on keyboard to activate the SPLIT function mode.
- b) Press "FUNCTION" button (the indicator light will flash), within 6 seconds press "SPLIT ON/OFF" keys on keyboard to stop the SPLIT function mode.

How to use keyboard SPLIT function

- a) Start tone mode at first and select an instrument as main tone
- b) Press "SPLIT ON/OFF" key to select keyboard split. Default 2nd tone is 049 STRINGS2
- c) Use "-" "+" buttons or "NUMBER KEY" to select an instrument as split tone.
- d) Enter "MENU" function and choose "SPLIT NOTE" to adjust the split note position.

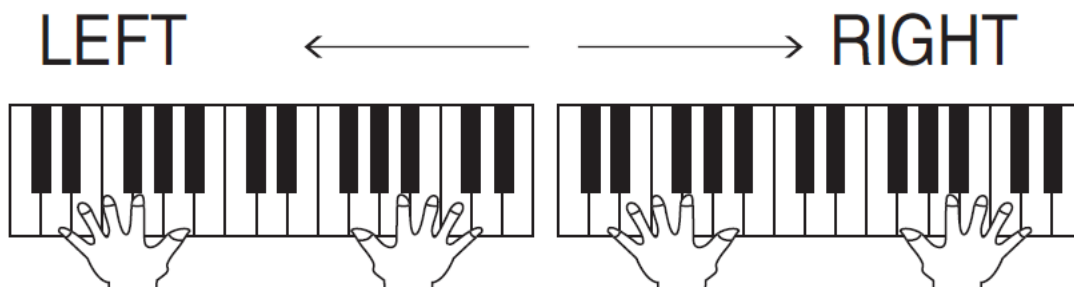


5 – Keyboard Percussion function

- a) Press "FUNCTION" button (the indicator light will flash), within 6 seconds press "PERCUSSION ON/OFF" keys on keyboard to start percussion mode.
- b) Press "FUNCTION" button (the indicator light will flash), within 6 seconds press "PERCUSSION ON/OFF" keys on keyboard to stop percussion mode.

13 – TONE/RHYTHM MEMORY STORAGE SETTING

 - Choose the desired “TONE/RHYTHM”, press “FUNCTION” button (the indicator light will flash), press any key between “M0-M3”, the setting will be stored, and the screen will show “Save”.
- Press the corresponding function keys between “R0-R3” to recall the stored setting.

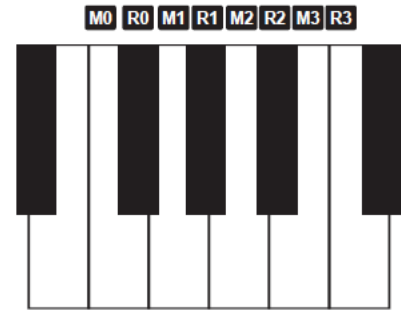


14 – BLUETOOTH FUNCTION

When the piano is ON, the Bluetooth port is enabled by default. Bluetooth PIN: 8888


15 – HEADPHONE JACKS

 There are two headphone jacks located on the left underside of the piano, allowing up to two pairs of headphones to be connected simultaneously.

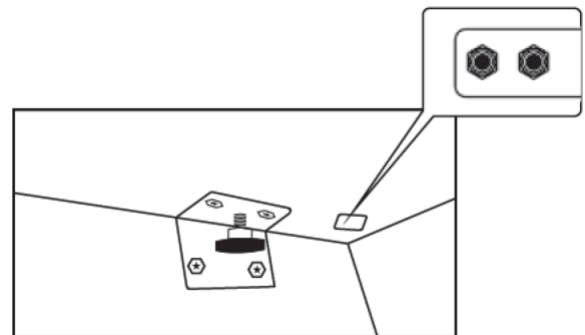

16 – PEDAL

 The piano has three pedals – just like a grand piano.

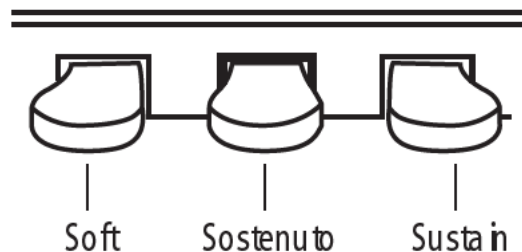

- **Soft pedal**
Depressing this pedal softens the sound and reduces its volume.
- **Sostenuto pedal**
Depressing this pedal after pressing the keyboard and before releasing the key sustains the sound of only the keys just played.
- **Sustain pedal**
Depressing this pedal sustains the sound even after removing your hands from the keyboard,

TONE LIST

NO	Name
0	GrandPno
1	BritePno
2	E.G.Pno
3	HnkyTonk
4	ElecPno1
5	ElecPno2
6	Harpschd
7	Clavi
8	Celesta
9	Glocken
10	MusicBox
11	VbPhone
12	Marimba
13	Xylophon
14	TubBells
15	Dulcimer
16	HamndOrg
17	Perc Org
18	Rock Org
19	ChrchOrg
20	ReedOrgn
21	Acordion
22	Harmnica
23	TgAccord
24	GtrNylon
25	GtrSteel
26	Gtr Jazz
27	GtrClean
28	GtrMuted
29	GtrOvrdr
30	Gtr Dist
31	GtrHarmo
32	Aco Bass

NO	Name
33	Fig Bass
34	PickBass
35	Fre Bass
36	SlapBas1
37	SlapBas2
38	SynBass1
39	SynBass2
40	Violin
41	Viola
42	Cello
43	Cnt Bass
44	Str trem
45	Str Pizz
46	Harp
47	Timpani
48	Strings1
49	Strings2
50	Str Syn1
51	Str Syn2
52	ChoirAah
53	VoiceDoo
54	VoiceSyn
55	Orch Hit
56	Trumpet
57	Trombone
58	Tuba
59	Mute Tpt
60	Fr Horn
61	BrassSec
62	BrasSyn1
63	BrasSyn2
64	SopraSax
65	Alto Sax

NO	Name
66	Teno Sax
67	Bton Sax
68	Oboe
69	Eng Horn
70	Bassoon
71	Clarinet
72	Piccolo
73	Flute
74	Recorder
75	PanFlute
76	Btl Blow
77	ShkHachi
78	Whistle
79	Ocarina
80	SqurWave
81	SawTooth
82	Calliope
83	Chiff
84	Charang
85	VoicLead
86	5th Lead
87	BassLead
88	New Age
89	Warm Pad
90	PlySynth
91	ChoirPad
92	BowGlass
93	MetalPad
94	HaloPad
95	Sweep
96	Rain
97	SoundTrk
98	Crystal

NO	Name
99	Atmosph
100	Bright
101	Goblin
102	Echo
103	Sci-Fi
104	Sitar
105	Banjo
106	Shamisen
107	Koto
108	Kalimba
109	Bagpipe
110	Fiddle
111	Shanai
112	TinkBell
113	Agogo
114	SteelDrm
115	WoodBlk
116	TaikoDrm
117	Melod Tm
118	SynthDrm
119	RevrsCym
120	GtrNoise
121	Breath
122	SeaShore
123	BrdTweet
124	TelPhone
125	Helicptr
126	Applause
127	GunShot
128	Luo 1
129	Luo 2
130	Luo 3
131	Luo 4
132	Pai Gu

NO	Name
133	Qin
134	BianZho
135	Yang Qin
136	Liu Qin
137	Pi Pa
138	Zho Ruan
139	Da Ruan
140	Yue Qin
141	San Xian
142	Gu Zheng
143	Gu Qin
144	Shen 1
145	Shen 2
146	Na Zi 1
147	Na Zi 2
148	Bi Li
149	Guan Zi1
150	Guan Zi2
151	Ba Wu
152	Di Zi 1
153	Di Zi 2
154	Hu Lu Si
155	Pai Xiao
156	S Xiao
157	Xiao
158	Kou Di
159	Xun
160	Gao Hu
161	Er Hu
162	Zhong Hu
163	MaTouQin
164	Ban Hu
165	Jing Hu
166	Hu Ense1

NO	Name
167	Hu Ense2
168	Piano W
169	Piano D
170	HnkTk W
171	DetunEP
172	DetunOr
173	Organ
174	Bandoneo
175	Ukulele
176	Mandolin
177	MellowGt
178	HawaiiGt
179	ChorusGt
180	Funk Gt
181	Feed Gt
182	Synth 1
183	Synth 2
184	Synth 3
185	Synth 4
186	Synth 5
187	SpacVioc
188	Syn Malt
189	EchoBell
190	Echo Pan
191	Castanet
192	ConcerBD
193	808 Tom
194	ElecPerc
195	Wind
196	Stream
197	Dog
198	Horse
199	Door

DEMO LIST

NO	Name
0	2-INVENT
1	PIZZPOLK
2	ARABE
3	UNDERSEA
4	HAVANERA
5	MUSICBOX
6	HGRDANCE
7	SL AMOUR
8	LEAF RAG
9	ANNIELAU
10	JUNESMBA
11	MACARENA
12	FUNK
13	WALTZ
14	ARIRANG
15	BINGO
16	HOMETOWN
17	WEELSBUS
18	REGGAE
19	TEMPANI
20	LEMON TR
21	G ISLAND
22	OCSUITE
23	DERRYAIR
24	RONDO BR
25	NUTCRACK
26	JMFLOWER
27	ROSESONG
28	CHILDBOR
29	DANSE NP

NO	Name
30	WIGNLIED
31	MERCY
32	DRMINSMR
33	MINUET
34	JTTWORLD
35	HOLYHALL
36	SONG SPR
37	JAMBALAY
38	AVEMARIA
39	DUCKS
40	PLSDANCE
41	LONDONHON
42	GRENSLEV
43	HORSERAC
44	SOMALI
45	SUNNYDAY
46	LAZYBIRD
47	CHRYSAN
48	SATNDOLL
49	DSYPUPPY
50	SOMEWHERE
51	DONNALEE
52	CHERRY
53	EARLYAUT
54	BLUES
55	RUNSUMER
56	DANCEYOU
57	GRAYMARE
58	SYMPHONY
59	TURKEY

RHYTHM LIST

NO	Name
0	8 BEAT 1
1	8 BEAT 2
2	8 BEAT 3
3	8 BEAT 4
4	8 BEAT 5
5	8 BEAT 6
6	8 BEAT 7
7	8 BEAT 8
8	16BEAT 1
9	16BEAT 2
10	16 EAT 3
11	16BEAT 4
12	16BEAT 5
13	16BEAT 6
14	16BEAT 7
15	16BEAT 8
16	POP 1
17	POP 2
18	POP 3
19	POP 4
20	BALLAD 1
21	BALLAD 2
22	BALLAD 3
23	BALLAD 4
24	SWINJAZZ
25	JAZZ 1

NO	Name
26	JAZZ 2
27	LANGE
28	SWING
29	RAGTIME
30	68BLUES
31	4.4BLUES
32	5.4BEAT
33	BOOGIE
34	SOULSHFF
35	BEBOP
36	GOSPLE
37	SW WALTZ
38	B BOOGIE
39	ROCK 1
40	ROCK 2
41	ROCK 3
42	ROCK 4
43	ROCK 5
44	ROCK 6
45	ROCK 7
46	FUNK 1
47	FUNK 2
48	FUNK 3
49	FUNK 4
50	FUNK 5
51	FUNK 6



NO	Na m e
52	EDANCE 1
53	EDANCE 2
54	DANCE 1
55	DANCE 2
56	DANCE 3
57	D I S C O
58	R&B 1
59	R&B 2
60	R&B 3
61	R&B 4
62	RAP 1
63	RAP 2
64	F O X T R O T 1
65	F O X T R O T 2
66	F O X T R O T 3
67	F O X T R O T 4
68	F O X T R O T 5
69	LATN 1
70	LATN 2
71	REGGAE
72	M O D E R N
73	SAM BA
74	CHACHA
75	TANGO

NO	Na m e
76	RUM BA
77	M A M B O
78	SALSA
79	ARABIAN 1
80	M A C A R E N A
81	M U S E T T E
82	X I N J I A N G
83	YUNNAN
84	X I Z A N G
85	COUNTRY 1
86	COUNTRY 2
87	C B A L L A D
88	C B R O T H E R
89	C O N P O P
90	S H U F F L E
91	C S W I N G
92	C T W O S T E P
93	C W A L T Z
94	W A L T Z 1
95	W A L T Z 2
96	T R W A L T Z
97	V N W A L T Z
98	M A R C H
99	P O L K A


ASSEMBLY

Be sure that all parts are included before starting to assemble digital piano:

  
Side board (A): 2 pcs
 Back board (B): 1 pcs
 Pedal board (C): 1 pcs
 M 6 x 25 screw (D): 4 pcs
 M 4 x 15 screw (E): 6 pcs
 M 6 x 17 plastic screw (F): 4 pcs

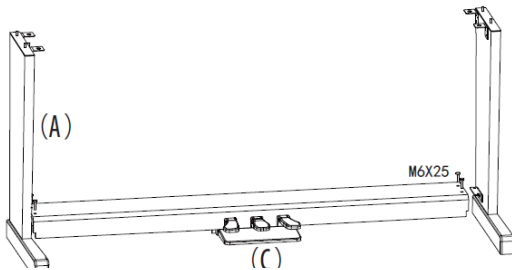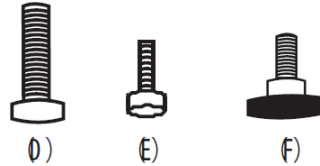

 1. Fasten side board (A) and
 Pedal board (C) with 4 Screws
 (D) M 6 x 25

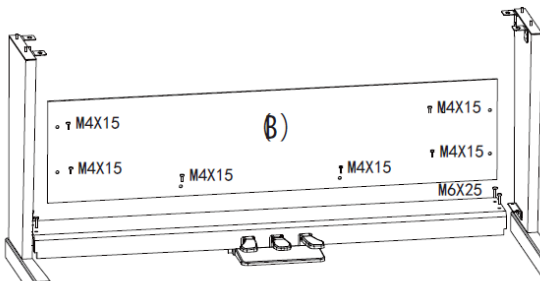

 2. Fasten side board (A) and
 back board (B) / pedal(C) with 6
 Screws (E)

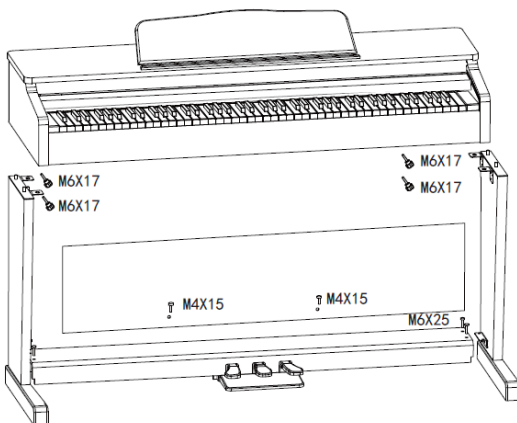

Place the piano on side board
 (A), fasten the piano and stand
 with 4 plastic screw (F)

