



# **QP100**

## **Portable Digital Piano**



[www.oqanmusic.com](http://www.oqanmusic.com)

## OQAN PRODUCT

### USER MANUAL - EN

Thank you very much for purchasing an OQAN brand product. We kindly ask you to please read carefully the user's manual that you can find in this link: <https://oqanmusic.com/downloads-no/> or capturing this QR code with your mobile phone to make sure you are doing a correct use of your equipment or instrument.



OQAN is committed to providing products of the highest quality, service and experience for the user for our clients so we incorporate our **Limited Warranty Extended from 3 years**. Remember to register your new OQAN equipment or instrument within ninety (90) days from the date of purchase to qualify for the extended warranty. This can be done quickly visiting: <https://oqanmusic.com/warranty>.

## PRODUCTO OQAN

### MANUAL DE USO - ES

Muchas gracias por comprar un producto de la marca OQAN. Le rogamos lea atentamente el manual de usuario que podrá encontrar en este link: <https://oqanmusic.com/downloads-no/> o capturando este código QR con su teléfono móvil para asegurarse de estar realizando una correcta utilización de su equipo o instrumento.



OQAN se compromete a proporcionar productos de la mayor calidad, servicio y experiencia para el usuario para nuestros clientes por lo que incorporamos nuestra **Garantía Limitada Extendida de 3 años**. Recuerde registrar su nuevo equipo o instrumento OQAN dentro de los noventa (90) días a partir de la fecha de compra para tener derecho a la garantía extendida. Esto puede realizarse rápidamente visitando: <https://oqanmusic.com/warranty>.



## PRODUTO OQAN

### MANUAL DE UTILIZAÇÃO - PT

Muito obrigado por comprar um produto da marca OQAN. Pedimos-lhe gentilmente leia atentamente o manual do utilizador que pode encontrar neste link: <https://oqanmusic.com/downloads-no/> ou capturando este código QR com o seu telemóvel para ter a certeza de que está a fazer um utilização do seu equipamento ou instrumento.



A OQAN está empenhada em fornecer produtos da mais alta qualidade, serviço e experiência para o utilizador para os nossos clientes, pelo que incorporamos a nossa **Garantia Limitada Prolongado de 3 anos**. Lembre-se de registar o seu novo equipamento ou instrumento OQAN dentro de noventa (90) dias a partir da data de compra para poder beneficiar da garantia alargada. Isto pode ser feito rapidamente visitando: <https://oqanmusic.com/warranty>.

## PRODOTTO OQAN

### MANUALE D'USO - IT

Grazie mille per aver acquistato un prodotto a marchio OQAN. Vi chiediamo leggere attentamente il manuale d'uso che si trova in questo link: <https://oqanmusic.com/downloads-no/> o catturando questo codice QR con il cellulare per essere sicuri di fare una vera e propria l'uso del vostro apparecchiature o strumenti..



OQAN si impegna a fornire prodotti di altissima qualità, servizio ed esperienza per l'utente per i nostri clienti in modo da incorporare la nostra **Garanzia Limitata Esteso a partire da 3 anni**. Ricordatevi di registrare il vostro nuovo apparecchio o strumento OQAN all'interno di novanta (90) giorni dalla data di acquisto per beneficiare dell'estensione di garanzia. Questo può essere fatto rapidamente visitando il sito: <https://oqanmusic.com/warranty>.

## PRODUIT OQAN

### MANUEL D'UTILISATIONO - FR

Merci beaucoup d'avoir acheté un produit de la marque OQAN. Nous vous demandons de bien vouloir lisez attentivement le manuel d'utilisation que vous trouverez dans ce lien: <https://oqanmusic.com/downloads-no/> ou en saisissant ce code QR avec votre téléphone portable pour vous assurer que vous faites l'utilisation de votre l'équipement ou l'instrument.




OQAN s'engage à fournir des produits de la plus haute qualité, un service et une expérience pour l'utilisateur pour nos clients, nous incorporons donc notre **Garantie Limitée Prolongation de 3 ans**. N'oubliez pas d'enregistrer votre nouvel équipement ou instrument OQAN dans quatre-vingt-dix (90) jours à compter de la date d'achat pour bénéficier de la garantie prolongée. Vous pouvez le faire rapidement en visitant le site : <https://oqanmusic.com/warranty>.

## Panel Function Diagram



## Interface

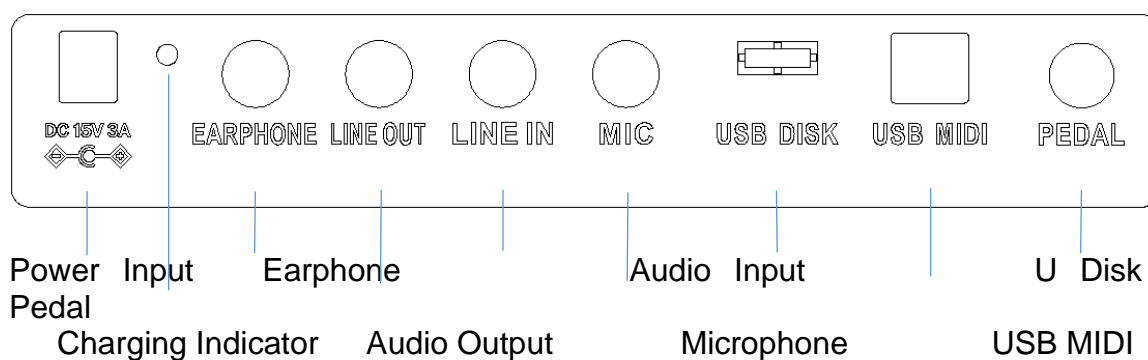

## Specification

- Keyboard: 88 Standard electric piano/ hammer action.
- Piano tone stratification: gradation of the physical model
- Tone: 169 tones.
- Demo: 88
- Metronome: 1/4,2/4,3/4,4/4.
- Number of recorded notes: 10000 notes.
- Interface: USB/MIDI, Headphone, Microphone, Audio input/output.
- Audio output power: 25W\*25W.

## Preparation before use

Power Connection:

1. Specifications of power adapter: 100-240V AC input; 15V/3A output.

2. The electric piano supports AC power supply and comes with lithium battery.
3. The indicator light is red when it is charging, and when it is full, it turns green.
4. Press the power button to turn on the electric piano, and the "Grand piano" will appear on the screen.

Note: If the electric piano is not used for a long time, please press the power switch to turn off the power of the electric piano. Otherwise, the life of lithium battery will be lost.

Volume adjustment:

Turn the "encoder/Volume knob" to adjust the volume.

Interface:

1. Headphone. The electric piano has an external socket for headphones, which can be connected.
2. Microphone. The Electric piano has microphone external socket, can be connected to the microphone while playing while singing; (Use a dynamic microphone)
3. Line Out. The line output interface can be connected to other audio equipment, for amplification, recording, etc.
4. Line Input. The line input interface can be connected to other audio equipment, and the audio signals provided by other audio equipment can be amplified by the audio system of the piano
5. USB MIDI. Through the USB interface, the piano is connected to the computer and other devices, using the application software on the computer, recording, arranging and other work.
6. U disk. Insert the U disk with MP3 files, you can play with the music.
7. Pedal. Single pedal function: the pedal is a sustain pedal. The sound will be prolonged when the pedal is pressed down.
8. Three-pedal function:

-Soft pedal: After pressing down, the keyboard playing sound will become weak.

-Sostenuto: Hold down the notes that need to be extended and then press the pedal. The notes will be prolonged, and the other notes will not be prolonged.

-Sustain pedal: After the pedal is pressed down, the sound will be prolonged.

## FUNCTION

### **Tone**

1. Encoder selection: Press and hold the "Tone" button, and rotate the encoder button to select the Tones from 000-168 (Includes 9 percussion instruments) (see the appendix for details)
2. Back to the piano tone: Press the "Tone" button to return to the piano tone.

### **Preset1**

1. After selecting the desired tone, long press the "Preset 1" button, the screen display 1-**SAVED** indicates that the newly selected tone has been stored in the "Preset 1".
2. Short press the "preset 1" key to recall the tone stored in the preset 1 and use it as the main tone.

### **Preset2**

1. After selecting the desired tone, long press the "Preset 2" button, the screen display 2-**SAVED** indicates that the newly selected tone has been stored in the "Preset 2".
2. Short press the "preset 2" key to recall the tone stored in the preset 2 and use it as the main tone.

### **Metronome**

1. Start/stop the metronome: Press and release the "Metronome" button to start or stop the metronome.
2. Select the metronome tempo: Press and hold the "Metronome" button, then turn the encoder to adjust the metronome tempo.
3. Select the metronome type: Press and hold the "Metronome" button, then press one of the four white keys starting from middle C to select 1/4, 2/4, 3/4, or 4/4 metronome type.

### **Rec/Play**

1. Recording: Press and release the "Rec" button to start recording. Play the keyboard to record the notes. Press the "Rec" button again to stop recording. Press the "Play" button to start playback.
2. Recording a specific song: Hold down one of the 16 white keys on the far left of the keyboard, then press the "Rec" button to start recording a

specific song. Play the keyboard to record the notes. Press the "Rec" button again to stop recording. Up to 16 songs can be recorded.

3. Playback of a specific song: Hold down one of the 16 white keys on the far left of the keyboard, then press the "Play" button to start playing a specific song.

### **Multi-track recording of a specific song.**

Hold down one of the 16 white keys on the far left of the keyboard, then press the "Rec" button to start recording a specific song.

The instrument is ready to record if the screen displays "Recording".

Press the "Play" button to enable multi-track recording: the display shows "Track+".

Play the keyboard to start recording, the original recording track automatically play, after recording, press the "record" key, stop recording.

Press the "play" key, play the songs you recorded.

**Note:** The total number of notes that can be recorded is up to 10,000 and they will not be lost in the event of a power outage.

### **Transpose**

Hold down the "Function" and "metronome" keys at the same time, the screen displays -12...12 setting value, rotate the encoder to select it.

### **Reverb**

Press and hold the "Function" button, then press the first black key on the left side of the keyboard to switch the Reverb ON or OFF. When the reverb switch is OFF, the reverberation intensity of the piano is the default value.

### **Vibrato**

Press and hold the "Function" key, then press the second black key on the left side of the keyboard to switch the Vibrate ON or OFF.

### **Sustain**

Press and hold the "Function" key, then press the third black key on the left side of the keyboard to switch the Sustain ON or OFF.

**Note:** The sustain of "Function" + the 3rd black key is a short sustain effect,

which is different from the pedal sustain, pedal sustain is a long sustain effect. When the pedal and "Function" + the 3rd black key are used at the same time, the rear operator takes effect.

## **MP3**

1. Inserting USB drive: Insert the USB drive that contains MP3 files into the USB interface. The screen will display "USB connecting" and then display the current song title on the USB drive when it is finished connecting.

2. Selecting music files: Hold down the "MP3" key and rotate the encoder to select the music file.

1. Playing music files: Press the "MP3" key to start or stop playing the current MP3 music.

## **Demo**

1. Encoder selection: Press and hold the "MP3" and "Function" keys at the same time, then rotate the encoder to select different demo songs.
2. Quick selection: Press and hold the "MP3" and "Function" keys at the same time, then press one of the 88 piano keys to select demo songs from 1 to 88.
3. Start/Stop demo songs: Press and hold the "MP3" and "Function" keys at the same time, then release them to start or stop the currently selected demo song.



## Tone list

000 GRAND PIANO	017 PERC ORG	034 PICK BASS	051 STR SYN 2
001 BRIGHT PIANO	018 ROCK ORG	035 FRETLS BASS	052 CHOIR AAHS
002 ELEC PIANO	019 CHURCH ORG	036 SLAP BASS 1	053 VOICE OOHS
003 HONKY TONK	020 REED ORG	037 SLAP BASS 2	054 VOICE SYN
004 E PIANO 1	021 ACCORDN 1	038 SYNTH BASS 1	055 ORCH HIT
005 E PIANO 2	022 HARMONICA	039 SYNTH BASS 2	056 TRUMPET
006 HARPSICHORD	023 ACCORDN 2	040 VIOLIN	057 TROMBONE
007 CLAVI	024 GTR NYLON	041 VIOLA	058 TUBA
008 CELESTA	025 GTR STEEL	042 CELLO	059 MUTE TRUMPET
009 GLOCKNSPL	026 GTR JAZZ	043 CONTRABASS	060 FRENCH HORN
010 MUSIC BOX	027 GTR CLEAN	044 STR TREM	061 BRASS SECT
011 VIBRAPHONE	028 GTR MUTED	045 STR PIZZ	062 BRASS SYN 1
012 MARIMBA	029 GTR OVRDRV	046 HARP	063 BRASS SYN 2
013 XYLOPHONE	030 GTR DISTRT	047 TIMPANI	064 SAX SOPRANO
014 TUBULR BELLS	031 GTR HRMNX	048 STRINGS 1	065 SAX ALTO
015 DULCIMER	032 ACOU BASS	049 STRINGS 2	066 SAX TENOR
016 HAMND ORG	033 FINGR BASS	050 STR SYN 1	067 SAX BTONE

068 OBOE	094 HALO PAD	120 GTR NOISE	146 BAWU
069 ENG HORN	095 SWEEP	121 BREATH	147 BANGDI
070 BASSON	096 RAIN FX	122 SEASHORE	148 KUNDI
071 CLARINET	097 SNDTRK FX	123 BIRD TWEET	149 JIANSHENG
072 PICCOLO	098 CRYSTAL FX	124 TELEPHONE	150 LUSHENG1
073 FLUTE	099 ATMOSPH FX	125 HELICOPTER	151 LUSHENG2
074 RECORDER	100 BRIGHT FX	126 APPLAUSE	152 GOURD
075 PAN FLUTE	101 GOBLIN FX	127 GUNSHOT	153 LOWSUONA
076 BOTTLE BLOWN	102 ECHO FX	128 YANGQIN	154 CLEANSUONA
077 SHAKHACHI	103 SCI-FI FX	129 ZHENG	155 RUAN
078 WHISTLE	104 SITAR	130 PIPA	156 BIG RUAN
079 OCARINA	105 BANJO	131 ZHENLING	157 MID RUAN
080 SQR WAVE	106 SHAMISEN	132 MANGQIN	158 FLUTE
081 SAW TOOTH	107 KOTO	133 LIUQIN	159 YU
082 CALLIOPE	108 KALIMBA	134 SANXIAN	160 STANDARD SET
083 CHIFF	109 BAGPIPE	135 DONGBULA	161 ROOM SET
084 CHARANG	110 FIDDLE	136 ERHU	162 POWER SET
085 VOICE LEAD	111 SHANAI	137 HIGHHU	163 ELECT SET
086 5TH LEAD	112 TINKLE BELL	138 MIDHU	164 SYNTH SET
087 BASS LEAD	113 AGOGO	139 HUS	165 JAZZ SET
088 NEW AGE	114 STEEL DRM	140 MATOUQIN	166 ORCH SET
089 WARM PAD	115 WOODBLK	141 PAIDRUM	167 EFFECT SET
090 POLY SYNTH	116 TAIKO DRM	142 QING	168 CHINESE SET
091 CHOIR PAD	117 MELODY TOM	143 BIAN ZHONG	
092 BOW GLASS	118 SYNTH DRM	144 XUN	
093 METAL PAD	119 REVRS CYM	145 XIAO	

## DEMO List

00 Demo	23 Whats love got to do with it	46 Tristezza	69 Allemande
01 Lyphard Melodie	24 Schubert Serenade	47 Is she really going out with him	70 Black cat
02 Symphonies 40	25 Concerto D'Amour	48 Tarantella	71 PATHETIQ
03 Send me a rose	26 Small town story	49 Beer Bucket Polka	72 Blue Tango
04 Tu amor fue una mentira	27 Polka italiana	50 La conocchia	73 Pathetique
05 Rikki dont bse that number	28 Innocence	51 Samba	74 Lejos de ti
06 For Elise	29 Horse racing	52 The Chase	75 Jeta Aragonesa
07 Celebration	30 Aaltz	53 Rivers of Babylon	76 Que seria de mi
08 Minuet in G Major	31 Spring	54 Ballade	77 Forelle
09 Angels	32 Produced by Ayase	55 When rish eyes are smiling	78 CRUCES
10 The Moon Represents My Heart	33 Carinito	56 La Candeur	79 Feel like making love
11 Minuet	34 Barcarolle	57 Black or white	80 Transcription Albeniz Tango
12 Friendship Lasts Forever	35 Dj dance	58 Souvenirs d'Andalousie	81 Flight of the Bumble Bee
13 Water Music	36 Starlight Waltz	59 Stway	82 Jasmine
14 Kulau Sonata	37 Jardin Secret	60 Croatian	83 Jazz etude
15 La Spagnola	38 Knight	61 The Dying Swan	84 Americana
16 Swan	39 Fatal Fury	62 Stuck	85 The Limpid Stream
17 The Blue Danube	40 Glittering Days	63 Lazybed	86 The Happy Farmer
18 La Styrienne	41 Nada Soy	64 What a fool	87 Prelude in C Major
19 Xinjiang Dance	42 Tomorrow will be better	65 C jam blues	88 Doraemon
20 Swallow	43 Another one bites the dust	66 You Might Need Somebody	
21 The Girl From Ipanema	44 Bother	67 Autumn Leaves	
22 Lover's Tears	45 Tango	68 Sleighride	