	THE TRUE DIVERSITY WIRELESS MICROPHONE-QWM-1 How to change the frequency or SYNC frequency on receiver ?					
Change	1.Turn on the wirless microphone system			Method 2: Automatic frequency conversion	1.Turn on the wireless microphone system as Method 1	
	2. Press the 'SET' button, then press '(f)' or '(1)' to choose the frequency number you like until you find the frequency you want. Then, press 'SET' one more time.				2. Press 'SET' twice in a row. You can see 'SC' on the LCD of the receiver. Then press the ' (') or ' ()' button. The microphone system will automatically search for the highest quality frequency.	
	 Press 'SYNC'. Align the microphone LCD with the IR light of the receiver so the microphone and receiver will automatically adjust to the same frequency. The frequency conversion task is completed. 				3. Press 'SYNC'. Align the microphone LCD with the IR light of the receiver so the microphone and receiver will be adjusted to the same frequency. The frequency conversion task is completed	